



# 亚太系列塑封机

## YATAI PLASTIC SEALING MACHINE



型 号 Model	YT-160	YT-260	320-2000型	YT-460	调速540型 (Speed540)	冷裱机650型 (Cold paste-up machine 650)
最大过塑宽度 Max Width	7英寸 (inch)	14-16英寸 (inch)	16英寸 (inch)	20英寸 (inch)	24英寸 (inch)	36英寸 (inch)
过塑厚度 Thickness	<1mm	<1mm	<1mm	<1mm	<1mm	<1mm
功 率 Power	300W	480W	560W	700W	1200W	—
电 压 Voltage	AC220V 50Hz	AC220V 50Hz	AC220V 50Hz	AC220V 50Hz	AC220V 50Hz	手动 Manual
机 重 Weight	7Kg	8Kg	8Kg	11Kg	15Kg	20Kg



# 亚太塑封机使用说明书

## YATAI PLASTIC SEALING MACHINE USE INSTRUCTION

### 产品用途 USAGE

该机预热迅速、升温均匀、塑封效果极佳。名片塑封、冷裱、一机两用，是塑封机中最新一代佳品。

塑封机用于身份证、工作证、结婚证、驾驶证、照片、名片、图纸等的封制，其操作简单方便，塑封过的卡片，可防潮、防水、防褪色、防涂改、便于长期保存。

· 冷裱时，不开加热开关，打开上盖即可操作。

YT series plastic sealing machine is a latest product developed and manufactured successfully through adopting the foreign advanced technology and integrated circuit temperature control. This machine can preheat quickly, rise the temperature evenly and is best in plastic sealing effect. It can apply to plastic sealing card, cold mounting, dual purpose of one machine and is a latest product in plastic sealing machine.

The plastic sealing machine uses in sealing the identity card, employee card, marriage certificate, photo, name card and drawing sheet etc. The operation is simple and convenient. The cards having been sealed in plastic can resist the moisture, water, fade and alter. It is easy to be stored for long time.

· When carrying out the cold paste-up, do not turn on the preheating switch and open the upper cover.

### 操作过程 OPERATING PROCEDURE

#### 1、准备工作:

· 将插头插入电源，打开电源开关，电源灯(红)亮，电机开始工作。

· 打开加热开关，开始加温，温度迅速上升。

#### 2、温度设定:

将旋钮设定在塑封所需要的温度位置上，预热3分钟左右。当温度上升到设定温度时，工作灯重复亮-暗几次，温度趋于稳定，这时就可以进行塑封工作。在工作过程中，恒温灯会出现闪烁、重复亮-暗变化，这表示机器内部恒温系统正在加热-停止加热的切换中，属于正常现象。

#### 3、塑封:

将所需塑封的卡片夹入护卡膜中，待绿灯亮时，把护卡膜已封口的一端插入机器中，如果将未封口的一端插入机器中，则易产生皱褶或护卡膜缠绕在胶辊上，或者产生堵塞现象。

· 护卡膜插入机器时，一定要将其放在进卡板的两条棱线内。

#### 4、塑封温度:

该机属调温型。在25℃室温下，推荐如下温度：护卡膜的厚度为0.05mm时为110℃，0.07mm时为140℃，0.1mm时为170℃。根据您的选用的护卡膜大小、厚度、材质等因素，还需进行适当调整。

· 温度过低，卡片图像模糊不清，这时应当增加设定温度。

· 温度过高，会使护卡膜产生皱褶，这时应当降低设定温度。

#### 1、Preparation:

· Insert the plug into the power socket, turn on power switch and power lamp is on (Red), then the electric motor begins to work normally.

· Turn on the preheating power and begin to preheat, the temperature rises rapidly.

#### 2、Temperature Set:

Set the button on the temperature position desired and preheat for about 3 minutes. When the temperature rises up to the set temperature and the working lamp will be on and off for several times. The temperature trends to the steady, this time, you can carry out the plastic sealing work. During the working procedure, the constant lamp will occur to twinkle, repeated light and dark changes. It means that constant temperature system inside the machine is at the convert in heating-stopping to heat and belongs to normal phenomenon.

#### 3、Plastic sealing:

When the green light is on, clip the plastic sealing cards into the protective film, insert the end of the card protective film which has been sealed into the machine. If inserting the end which has not been sealed into the machine, it will produce fold or the card protective film rounds the offset or produce the block phenomenon.


· When the card protective film is insert into the machine, it must be placed into the both crest lines of the card entrance plate.

#### 4、Plastic sealing temperature:

This machine belongs to a temperature adjustment type. Under 25℃ room temperature, recommend the following temperature: When the thickness of the card protective film is 0.05mm, the temperature is 110℃, 0.07mm for 140℃, 0.1mm for 170℃. They also can be adjusted according to the factors selected by you, such as the card film size, thickness and material etc.

· If the temperature is too low, the card picture is not clear, this time, you should increase the setting temperature.

· If the temperature is too high, the card protective film will cause the twinkle, this time, you should reduce the setting temperature.

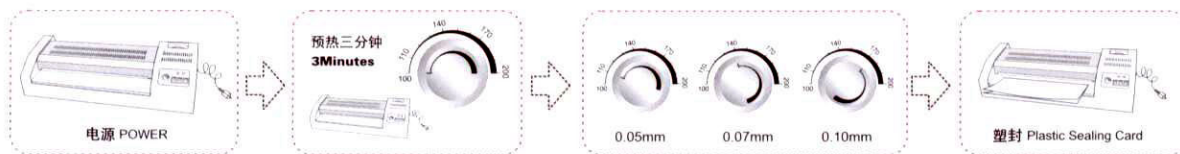

### 注意事项 PRECAUTION

- 1、塑封机应放置在干燥、清洁的地方，远离易燃易爆物品。
- 2、禁止将水泼洒在机器上，机器工作时禁止将物品放在其外壳上。
- 3、为了您的安全，本机请接地线。
- 4、停机时，先关加热开关，待散热后(温度低于80℃)再关掉电源开关。
- 5、严禁带电维修。
- 6、胶辊清洗时，可用软布蘸酒精擦。不允许用汽油、稀释剂清洗，更不允许用金属刷子和工具，刷、铲敲打胶辊。

- 1、The plastic sealing machine should be placed in dry and clean places, far away from the flammable matters.
- 2、Do not spray the water on the machine. When the machine is working, do not put the objectives on the outer case.
- 3、This machine should be connected with the ground wire.
- 4、When stopping the machine, first turn off the preheating power, after radiation (the temperature is lower 80℃), then turn off the power switch.
- 5、Maintenance with electricity is forbidden.
- 6、When cleaning the rubber roller, use the soft cloth with alcohol. Do not use the gas and thinner, especially do not allow to use the metal brush and tool to brush, shovel or knock the rubber roller.



永嘉县亚太办公设备厂

地址：瓯北浦一中路23号 电话：0577-67359432 67999135

传真：0577-67358851 手机：13906648472

售后服务热线：0577-67999851

Http://www.yataijx.cn.alibaba.com E-mail:yatai99999@163.com